





www.TITANMOTO.com

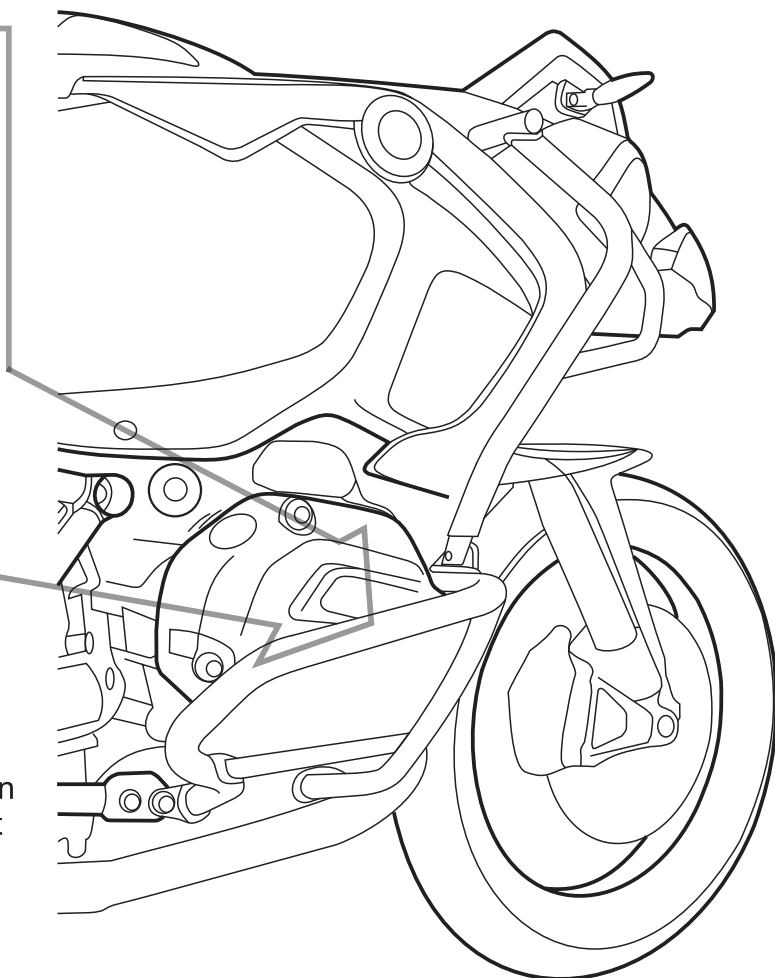


Подножки выносные на дуги\ Crash bar footrests\ Sturzbügelrasten\
Estriberas para la barra de protección\ Repose pieds pour pare-cylindre\
Pedane posapiedi sul paracilindri\ Pé de barra de descanso descansa
BMW, Honda, KTM, Suzuki, Yamaha, Triumph

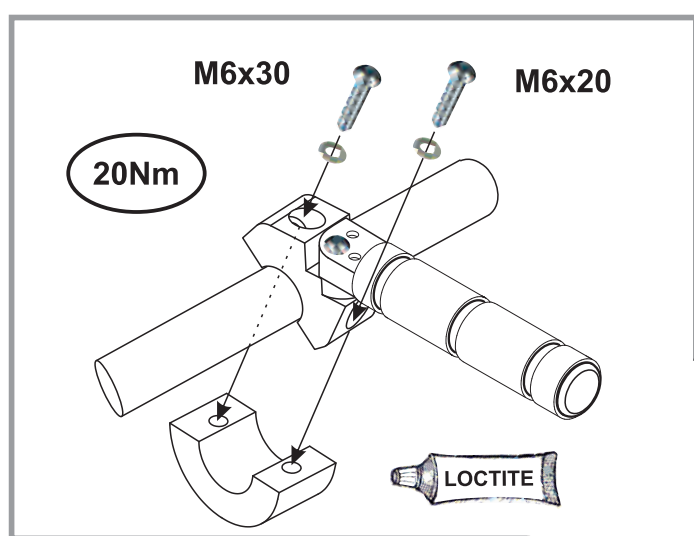

The footrest can be assembled with various options depending on the model of the motorcycle and the shape of the Crash bar.

Before installation, determine the exact location of installation and the method of assembly that suits you.

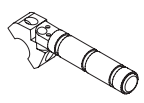1	Footrest Подножка	2	Binding Крепление	3	Washer Шайба	4	Spring washer Гровер	5	Screw Болт	6	Screw Болт
											
Qty/Кол-во 2		Qty/Кол-во 2		M6 DIN 125 Qty/Кол-во 4		M6 DIN 127 Qty/Кол-во 4		M6x30 ISO 7380-1 Qty/Кол-во 2		M6x20 ISO 7380-1 Qty/Кол-во 2	

Attention!

Installation may cause difficulties due to misalignment of the screws. We recommend contacting a specialized service.